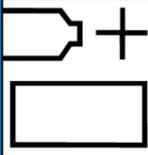
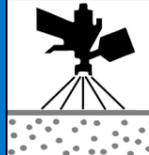
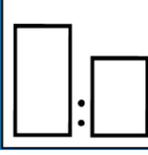
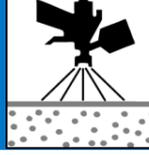
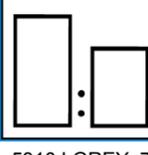
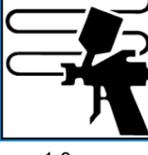
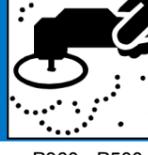
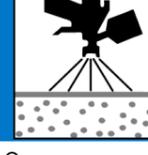
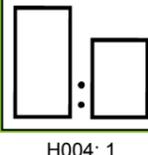
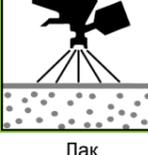
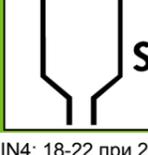


<p>2035</p> <p>Raderal® IR Premium Putty 2035</p> 										
<p>4075</p> <p>Priomat® Wash Primer 4075</p> 										
<p>5310</p> <p>Permasolid® HS Premium Surfacer 5310</p> 										
<p>293-P</p> <p>Permacron® Base Coat 293/295/297</p> 										
<p>8034</p> <p>Permasolid® HS Clear Coat 8034</p> 	